


Deck Belt Replacement (Twin Idler Pulleys)

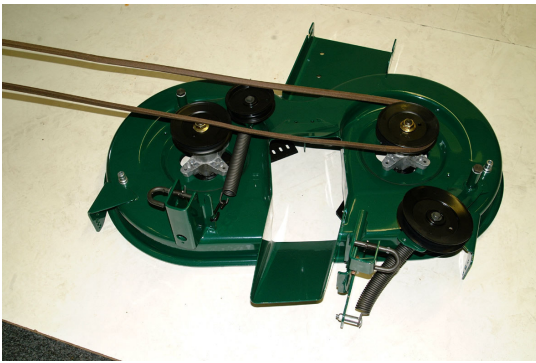


1. Place belt on right hand spindle pulley, drag remainder of belt out to left side of machine.




2. Hold open belt loop in right hand, palm uppermost.




3. Rotate hand 180° anti-clockwise. This gives an upper & lower fall on the belt.

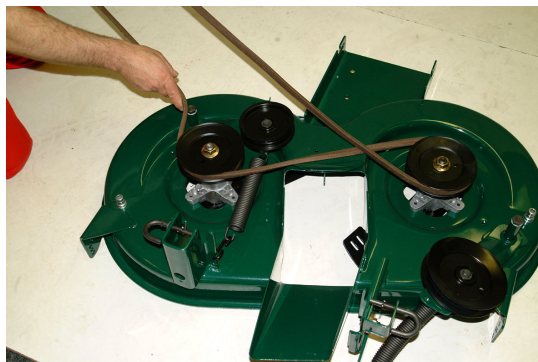

4. Place lower fall around left hand spindle pulley.

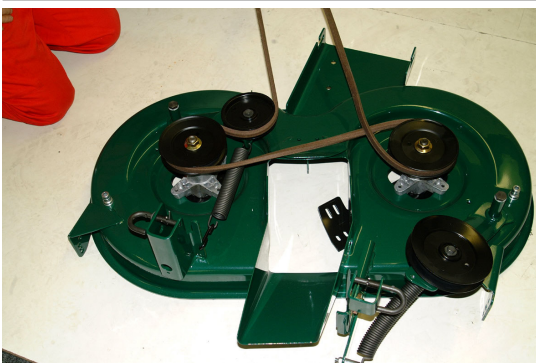

5. From the front of the left spindle pulley follow the belt around the adjacent flat idler pulley.

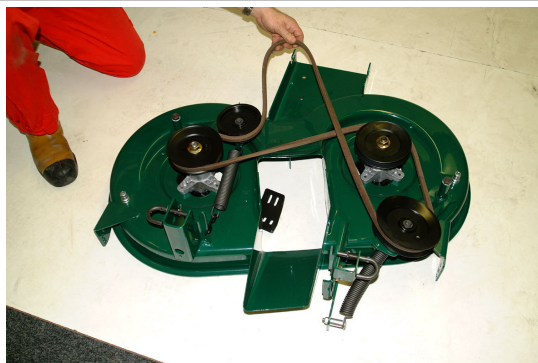

6. Drag the belt from the rear of the right spindle pulley and place it around the right hand idler pulley.



7. Place remainder of belt around engine pulley.

Note

For clarity, the belt guards and keepers have been removed for the above procedure. Although it is not necessary to remove the guards in practice, the keepers must be removed to prevent having to force the belt past the belt keepers.