


Deck belt Replacement (Single Idler Pulley)




1. Place belt on right hand spindle pulley, drag remainder of belt out to left side of machine.

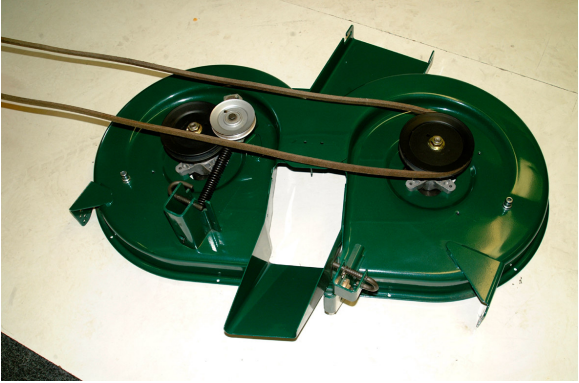

2. Hold open belt loop in right hand, palm uppermost.




3. Rotate hand 180° anti-clockwise. This gives an upper and lower fall on the belt.

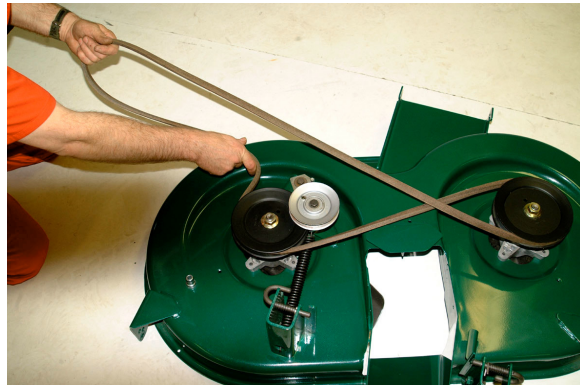

4. Place lower fall around lower pulley. (Left hand spindle pulley.)



5. Place the upper fall around the upper pulley. (Spring loaded idler pulley.)

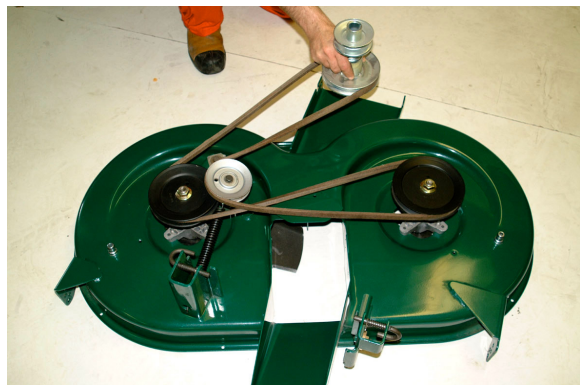

6. Place remainder of belt around engine pulley.

Note

For clarity, the belt guards have been removed and the idler pulley slackened for the above procedure. Although it is not necessary to remove the guards in practice, the idler pulley must be slackened to prevent having to force the belt past the belt keeper.